



SETTING THE MAXIMUM ALLOWABLE THERMOCOUPLE READING ON THE **EUROTHERM CONTROLLER.**

Step 1: Press and hold the menu button UNTIL YOU SEE "LEv3 GOTO" as shown below:



Step 2: Press the up arrow to show "CONF goto."



Step 3: Press the "Enter" button.





Step 4: Then using the enter button and the up/down arrows enter the code as 0004. Then press the enter button again and you will get the screen to look as below:



Step 5: Press the Menu button until you see the option "AI LIST" as shown below:



Step 6: Press the Enter key until you see "RNG .HI"





Step 7: Press and hold the Up arrow until you go above the max temperature you want to heat to. In the image below we set it to 2300.



Step 8: Press and hold the menu key until you see "LEv 1 goto" and then press the enter key. Then it is done