




CHANGING THE MAXIMUM ALLOWABLE SETPOINT ON THE EURO THERM CONTROLLER.


Step 1: Press and hold the menu button UNTIL YOU SEE "LEv3 GOTO" as shown below:

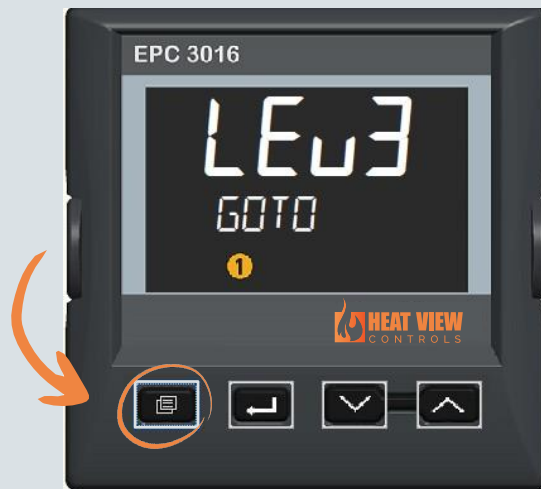

Step 2: Press the up arrow to show "CONF goto."



Step 3: Press the "Enter" button.

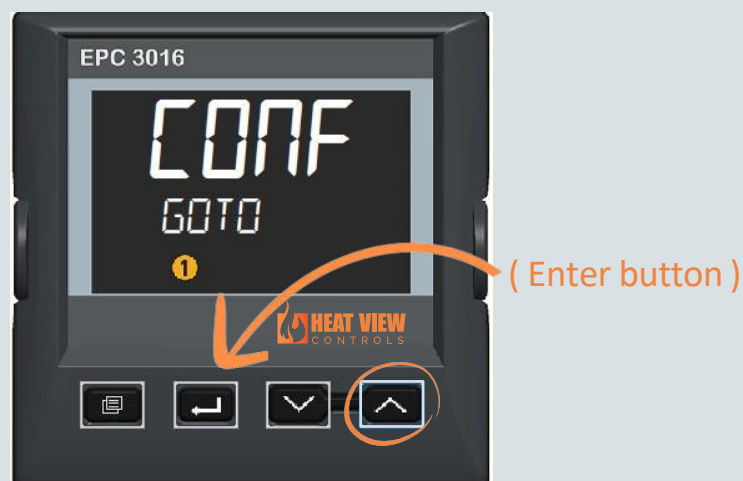



Step 4: Then using the enter button and the up/down arrows enter the code as 0004. Then press the enter button again and you will get the screen to look as below:



Step 5: Press the menu button until you see "LOOP List" as shown below:



Step 6: Press the enter button 1 time to get the "mAIN S List"





Step 7: Press the Up arrow until you see "SP S.List" as shown here



Step 8: Press the Enter key and then press the up arrow to set your upper limit to 2300 (or whatever your max is) as shown here:



Step 9: Press the enter key until you see SP.HI and set that to the same number as in the previous step.





Step 10: Press the Menu button until you see the option "ALLIST" as shown below



Step 11: Press the Enter key until you see "RNG .HI".



Step 12: Press and hold the Up arrow until you go above the max temperature you want to heat to. In the image below we set it to 2300.



Step 13: Press and hold the menu key until you see "LEv 1 goto" and then press the enter key. Then it is done.