



## CHANGING THE CONTROLLER WITHOUT WIRING FOR THE EURO THERM CONTROLLER.

- Step 1:** .Disconnect the 120V power cable from the TwinHEAT module
- Step 2:** Take note of the orientation of the Eurotherm. (Which way is up)
- Step 3:** GENTLY push on the two tabs next to the face of the Eurotherm so they release the face. It is a VERY small amount you need to move them to release the unit. These tabs break easily, so please be extremely gently here. The image below shows which tabs and the directions to push them.



- Step 4:** Pull the Eurotherm face out of the unit gently
- Step 5:** Put the new Eurotherm into the hole that is now present and push it all the way in until it clicks in place and the side tabs are now holding it.