




Enabling DHCP on the Conpaks


You can follow these steps directly on the HMI screen or you can connect remotely through the Heat View desktop app.

Remote Connection:


1. On the Heat View desktop application, go to the “Controller settings” tab.

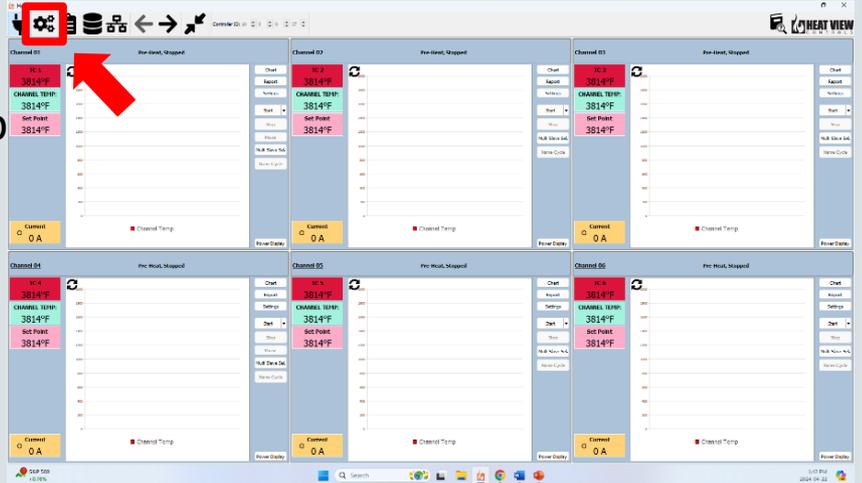

2. Select “Remote HMI Viewer”.

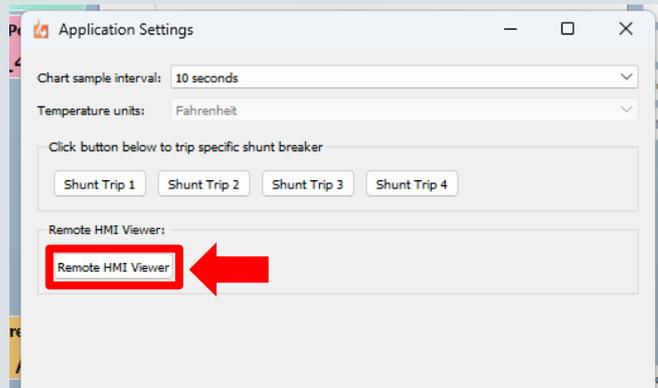

3. In the dialog box that opens, select File > Connect.

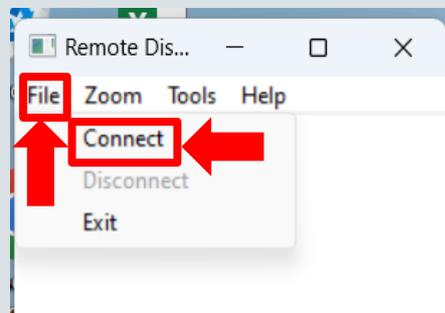

4. Enter the IP address of the HMI screen and click “OK”.




You should now see a copy of the HMI screen on your desktop!






Enabling DHCP:


1. On the HMI screen on the compak, exit the Heat View software by going to Settings > Advanced Controls > Exit Application.

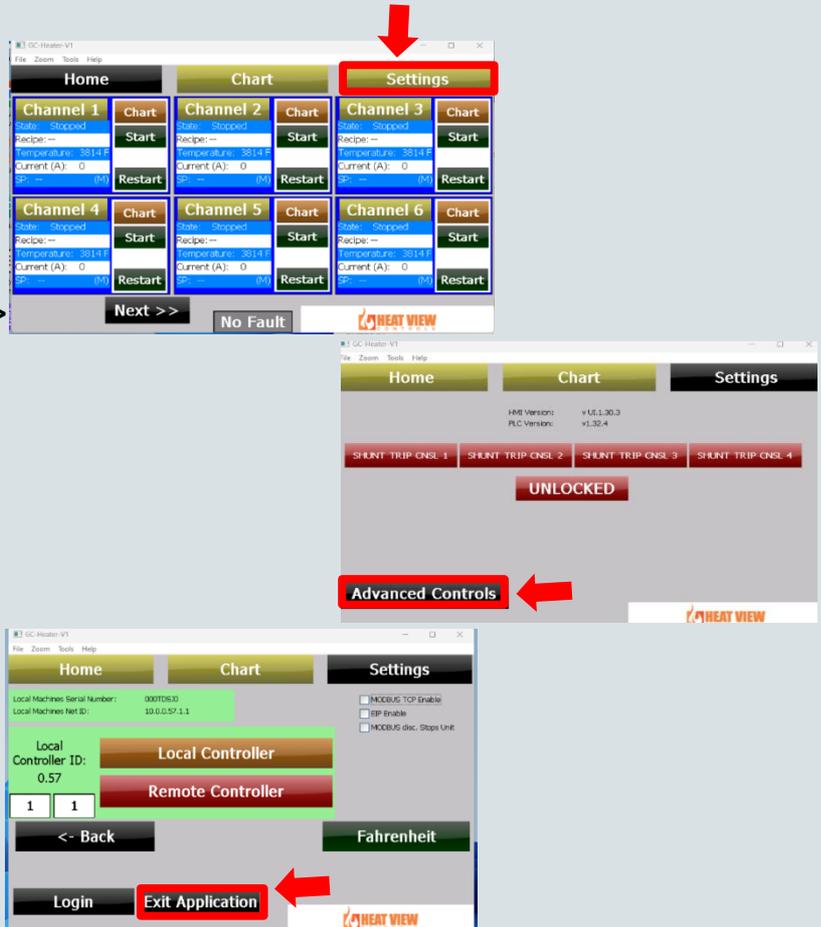


2. Go to the start menu and select “Control Panel”.

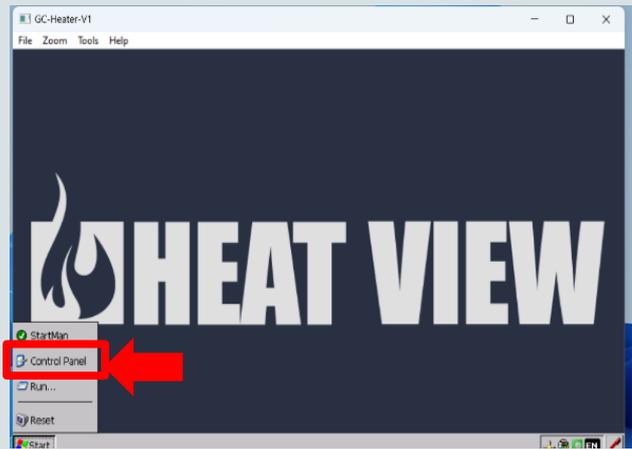

3. Select “Network and Dial-Up Connections”.

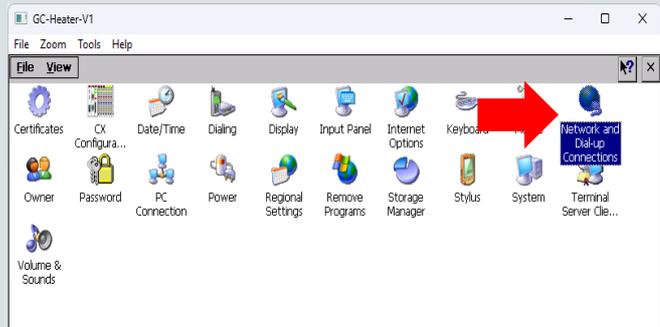


4. Select “FEC1”.

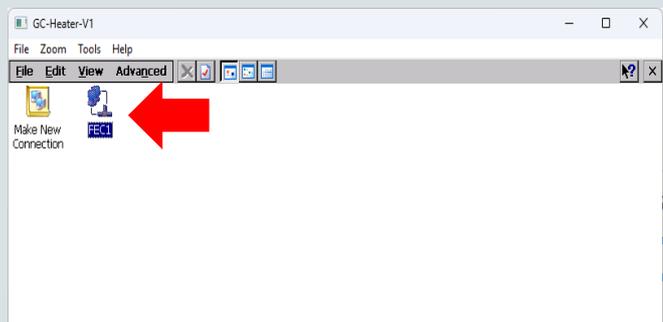




5. Select the option “Obtain an IP address via DHCP”.

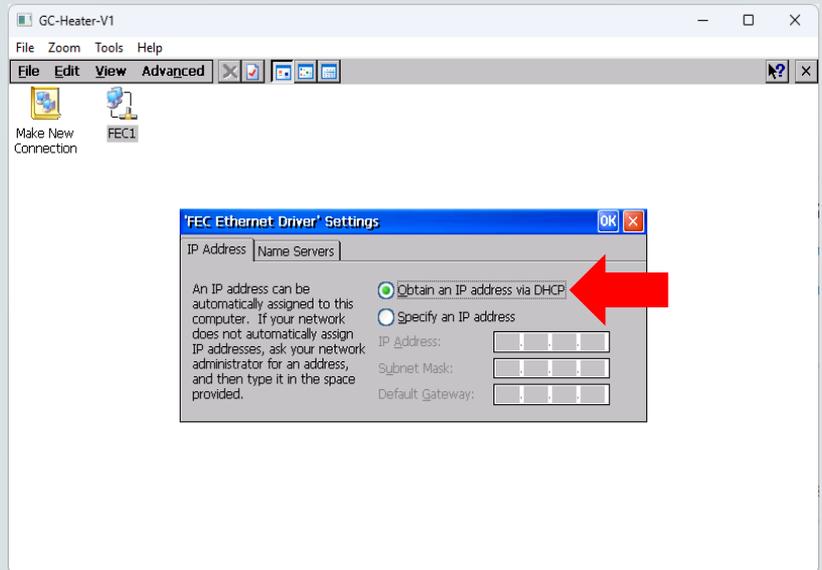

6. Go to the next tab called “Name Servers” and make sure all fields on this page are **EMPTY**.

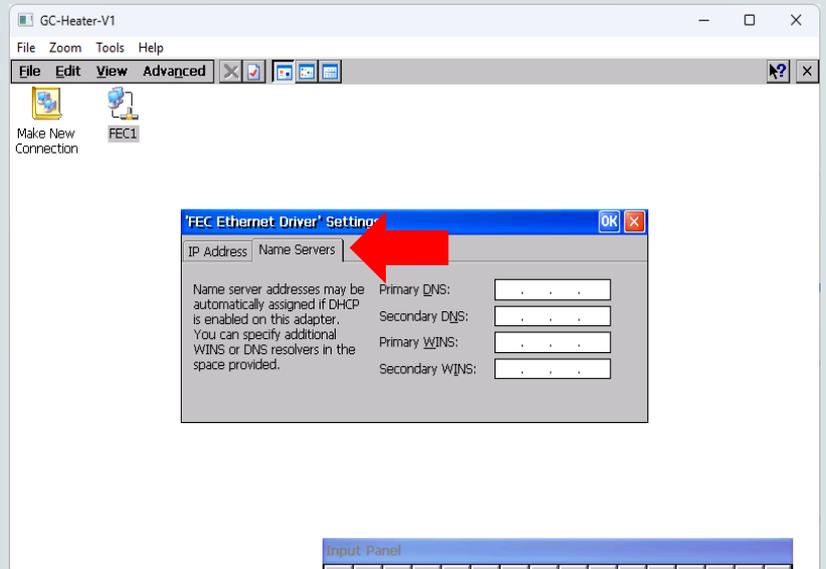

7. Click “OK” at the top when you are finished and then power cycle your unit.

