





Recalling Data from a Heat View Controller


1. Open the Heat View Software on your computer and make sure the controller is connected to the computer.

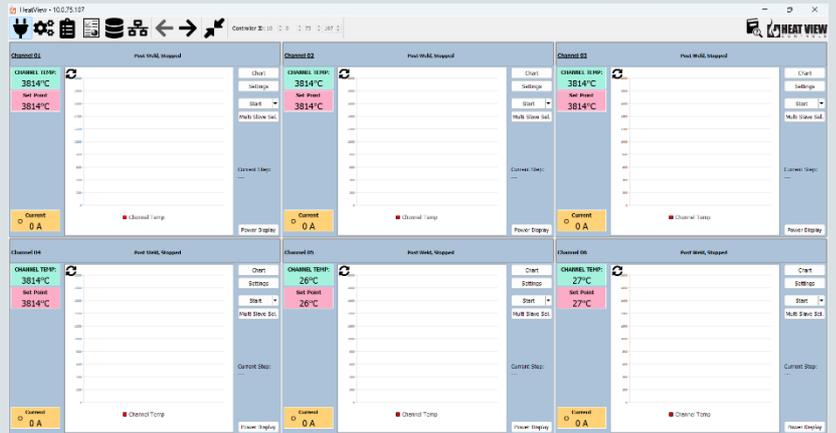

2. Click on the “Get backup report” button at the top of the screen.

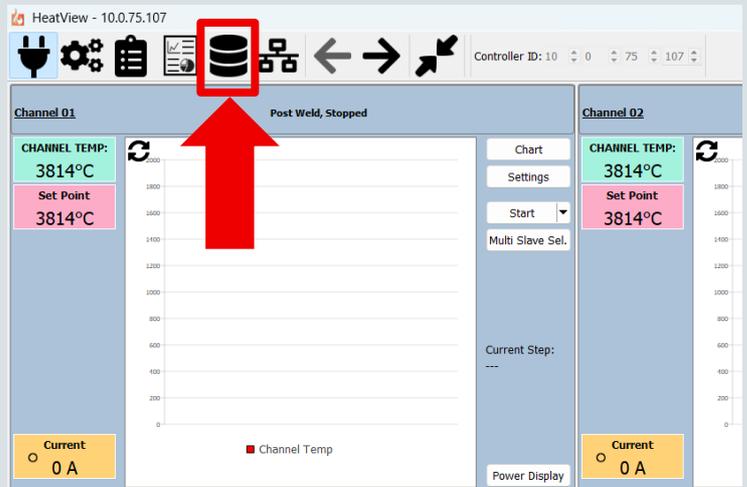


3. A pop-up screen will appear, next to “Controller IP Address” enter the IP address of the controller you are trying to pull data from.
Ex. 10.0.0.101

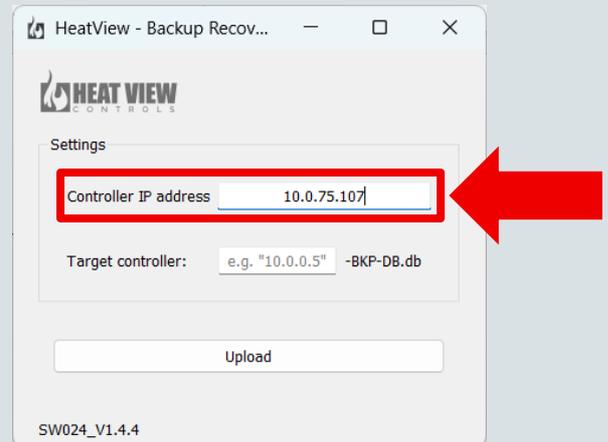

4. Next to “Target Controller”, enter a backup name for the file. We suggest making it the same IP address as above. Then click the “Upload” button.



Ex. 10.0.0.101-BKP

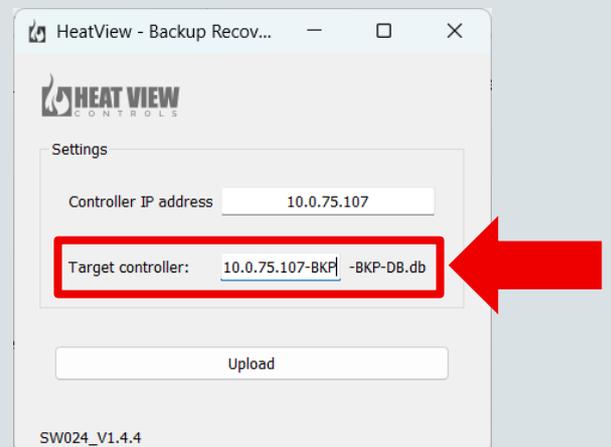





Recalling Data from a Heat View Controller

5. A pop-up window will appear listing all of the available data that can be pulled. Select the date frame that you want to pull data from and then select the channels that you would like included in this file. Then click "OK".

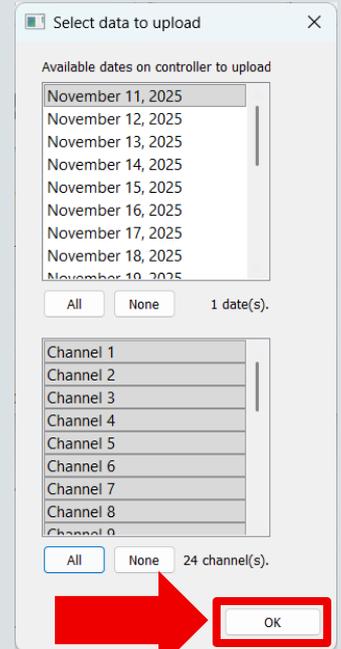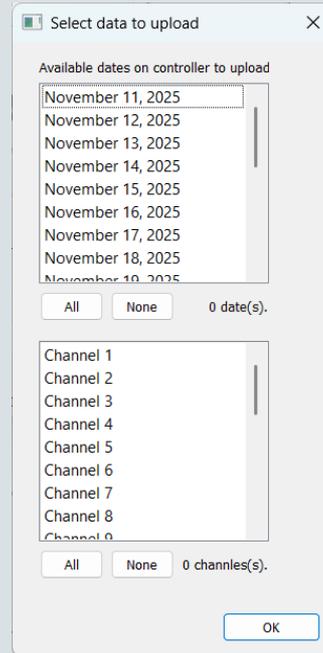

6. This process may take several minutes depending on how large of a time frame you have selected.

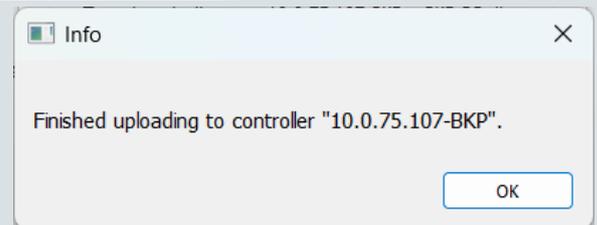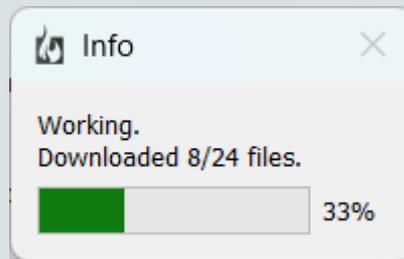

7. Re-open the report tool and the data will be available for generating a report.